

DEKRA
DEKRA

MARTINI

MARTINI

MARTINI

5

DEKRA

6

MARTINI

MARTINI

WARSTEINER

MANNESMANN

BAUMLER
men's fashion

BOSCH

BOSCH

185 vs TI

Larini 5

Nannini 6

6 Nannini

5 Larini

MAGNET
MARELLI

MAGNET
MARELLI

BAUMLER
men's fashion

BAUMLER
men's fashion

WURTH
WURTH

CAUTION

ROTATING PARTS
ENLARGED 1/2

TAMIYA PLASTIC MODEL CO.

PRINTED IN JAPAN

5 5 MARTINI RACING 6 6
 5 Alfa Romeo 6

E

O.Z.
 WHEELS

O.Z.
 WHEELS

O.Z.
 WHEELS

BOSCH
 BOSCH

O.Z.
 WHEELS

GUTMANN
 EXHAUST SYSTEMS

ON OFF

GUTMANN
 EXHAUST SYSTEMS



1/10 RC MARTINI ALFA ROMEO 155 V6 T1
 58169(1425518) ©1997 TAMIYA




TAMIYA PLASTIC MODEL CO.
 0397 DY PRINTED IN JAPAN

A FRONT
フロントウインドウ

《マスクシール》
ウインドウ専用のマスクシールです。
塗装前にボディ内側からはります。

MASKING STICKER
Mask off window areas from the inside
using these stickers prior to painting.

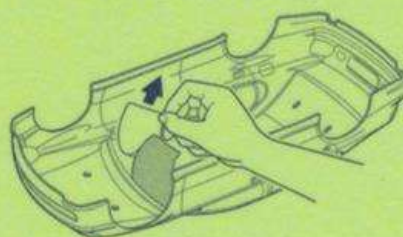

大きなシールは中央の台紙を切りおとして
おきます。
Remove the center strip of lining.

C RIGHT FRONT
右ウインドウ 前

D LEFT FRONT
左ウインドウ 前

E RIGHT REAR
右ウインドウ 後

F LEFT REAR
左ウインドウ 後

《マスクシールのはりかた》
① 線にそって切り抜きます。
② マスクシールをボディの内側からはります。
台紙は一度に全部はがさず、端から
少しずつはがしながらはっていきます。フ
ロントウインドウなど大きなシールは、台
紙の中央を5ミリ程度の幅で切りおとしてか
ら位置決めを行ない左右にはっていきます。
③ 塗料がしみ込まないようにシールの端を
しっかりおさえてから塗装します。
★窓ワクを見やすくするためにボディ表面
の保護フィルムの上から油性サインペンで
窓の形をかいておくとはりやすくなります。

《注意》 ポリカボスプレーで重ね塗りする
場合は半乾きの状態は避けて、確実に乾か
してから塗り重ねてください。

HOW TO APPLY

- ① Cut to shape using scissors.
 - ② Peel back the lining a little and place mask-
ing sticker into position. For large areas, remove
the center strip of the lining to avoid sticker
moving out of alignment.
 - ③ Remove the lining slowly, pressing film down
towards the outside and firmly along the entire
edge of mask.
- ★ To make positioning more accurate, draw the
window frame with a felt tipped pen on the out-
side of the protective vinyl body coating.

B REAR
リヤウインドウ

1/10 RC マルティニ アルファロメオ 155 V6 TI
MARTINI ALFA ROMEO 155 V6 TI (58189) 11425520

TAMIYA, INC.
1214CH ©1997 TAMIYA